COMMSCOPE® Instruction Sheet

860641194
Rev A, January 2018
www.commscope.com

ModPlug Pull Tab Kit Installation Instructions

General

How to Contact Us

- To find out more about **CommScope®** products, visit us on the web at www.commscope.com/

- For technical assistance:

  – Within the United States, contact your local account representative or technical support at 1-800-344-0223. Outside the United States, contact your local account representative or **PartnerPRO™** Network Partner.

  – Within the United States, report any missing/damaged parts or any other issues to **CommScope** Customer Claims at 1-866-539-2795 or email to claims@commscope.com. Outside the United States, contact your local account representative or **PartnerPRO** Network Partner.

Tools Required
None

Specifications
Mating Cycles:
750 minimum
Environmental Data
Temperature Range:
–40°F (-40°C) to 158°F (70°C) (Storage)
14°F (-10°C) to 140°F (60°C) (Operational)
Humidity:
95% Noncondensing

Parts List

PullTab Kit includes 50 Base Clips & 50 Pull Latch Tabs

Base Clip

Pull Latch Tab

Assembly Procedure of Pull Tab Kit:

Step 1 –
Insert one side of the Pull Tab loop feature into the Base Clip groove feature per orientation below in Figure A.

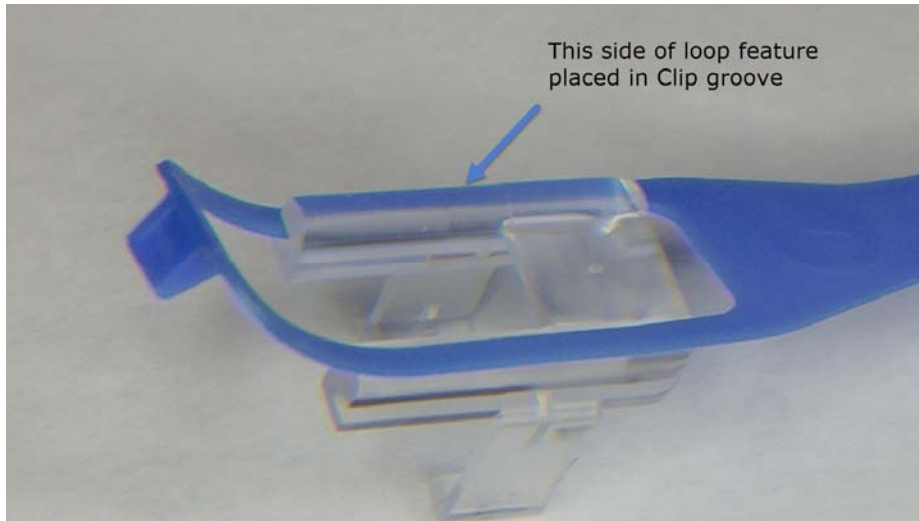This side of loop feature placed in Clip groove

Figure A

Step 2 –

On other side of Pull Tab, loop snap over the Base Clip groove feature until the Pull Tab loop is within the Base Clip groove feature see below Figure B.
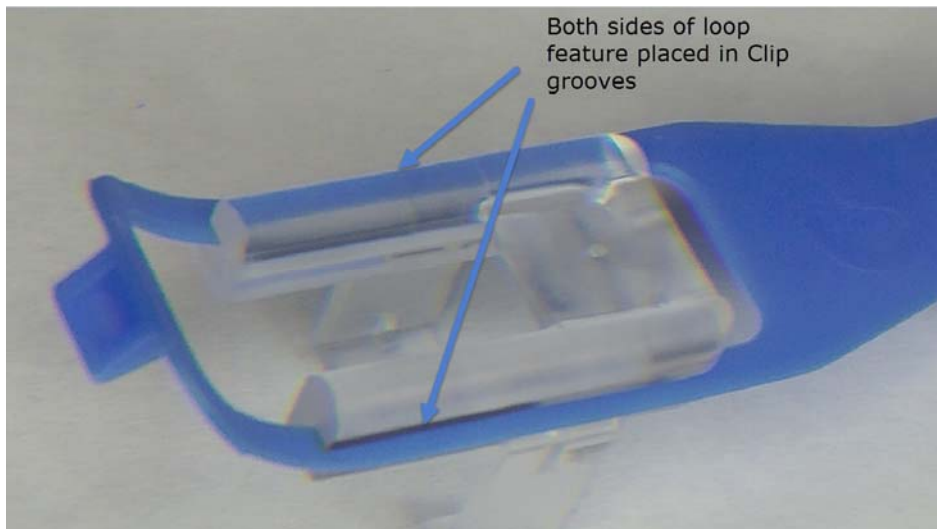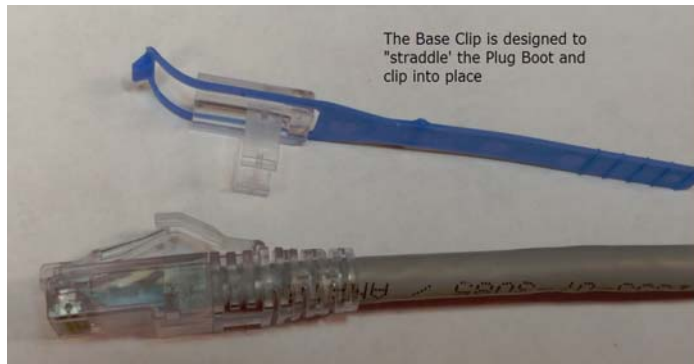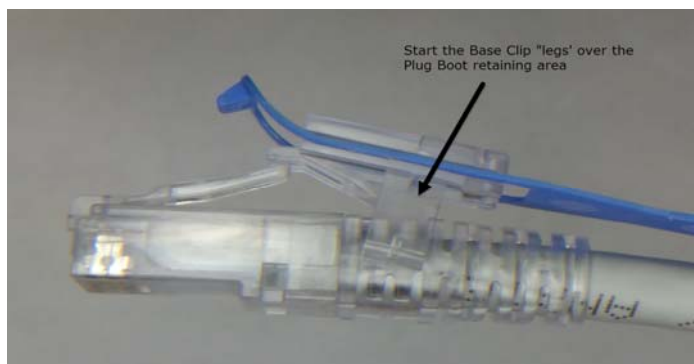

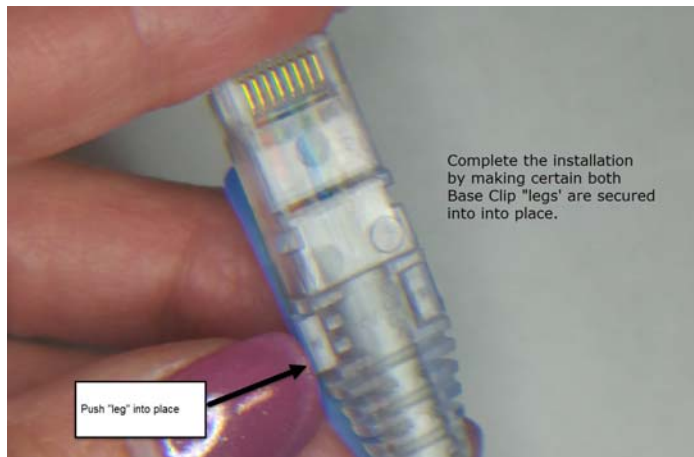Both sides of loop feature placed in Clip grooves

Figure B

Step 3 –
Install Plug Pull Tab Kit onto Plug Boot:

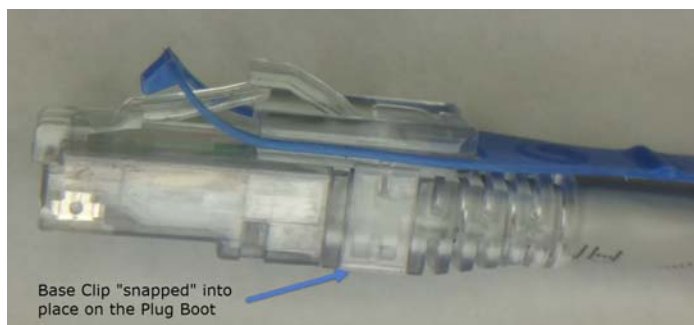The Base Clip is designed to "straddle' the Plug Boot and clip into place

A)

Start the Base Clip "legs' over the Plug Boot retaining area

B)

Complete the installation by making certain both Base Clip "legs' are secured into into place.

Push "leg" into place

C)

Base Clip "snapped" into place on the Plug Boot

D)

Operation of Pull Tab Latch:

Step 1 –
Insert Plug with Pull Tab Kit into Jack.

Insert ModPlug into Jack. Making certain that the Pull Tab is pushed all the way forward

Step 2 –
To release the Plug from the Jack, Pull backward on the Pull Tab, also gripping the cable. Pull rearward and the ModPlug latch releases from the Jack:

Pull on the Pull Tab, also gripping the cable. Pull back to release the ModPlug from the Jack.